

## FH1 – Maintenance Guidelines



Regular and scheduled maintenance is essential for the integrity of the FH1 Hood & Hose.

A regular monthly maintenance schedule is performed as per the pre-use checks which includes a thorough visual of all components.

Carry out a thorough inspection of all component parts before and after each occasion of use.

Pay particular attention on the <u>headtops</u> exhalation valve and the insertion point of the blower assembly hose.

The exhalation valve 5513325 on the hood and O Ring 1028174 in the end of the hose connection must be replaced annually regardless of the condition.



